

Enable Bluetooth

/boot/config.txt

Treiber laden

btmod

hciuart enable

From:
<https://drklipper.de/> - **Dr. Klipper Wiki**

Permanent link:
https://drklipper.de/doku.php?id=linux:bluetooth:01_enable_bluetooth&rev=1699292560

Last update: **2023/11/06 18:42**

